


13 Pin Towing Socket - Testing the road lights - ENGINE RUNNING and vehicle lights turned on.

Vehicle Battery Voltage - Read directly across the battery terminals

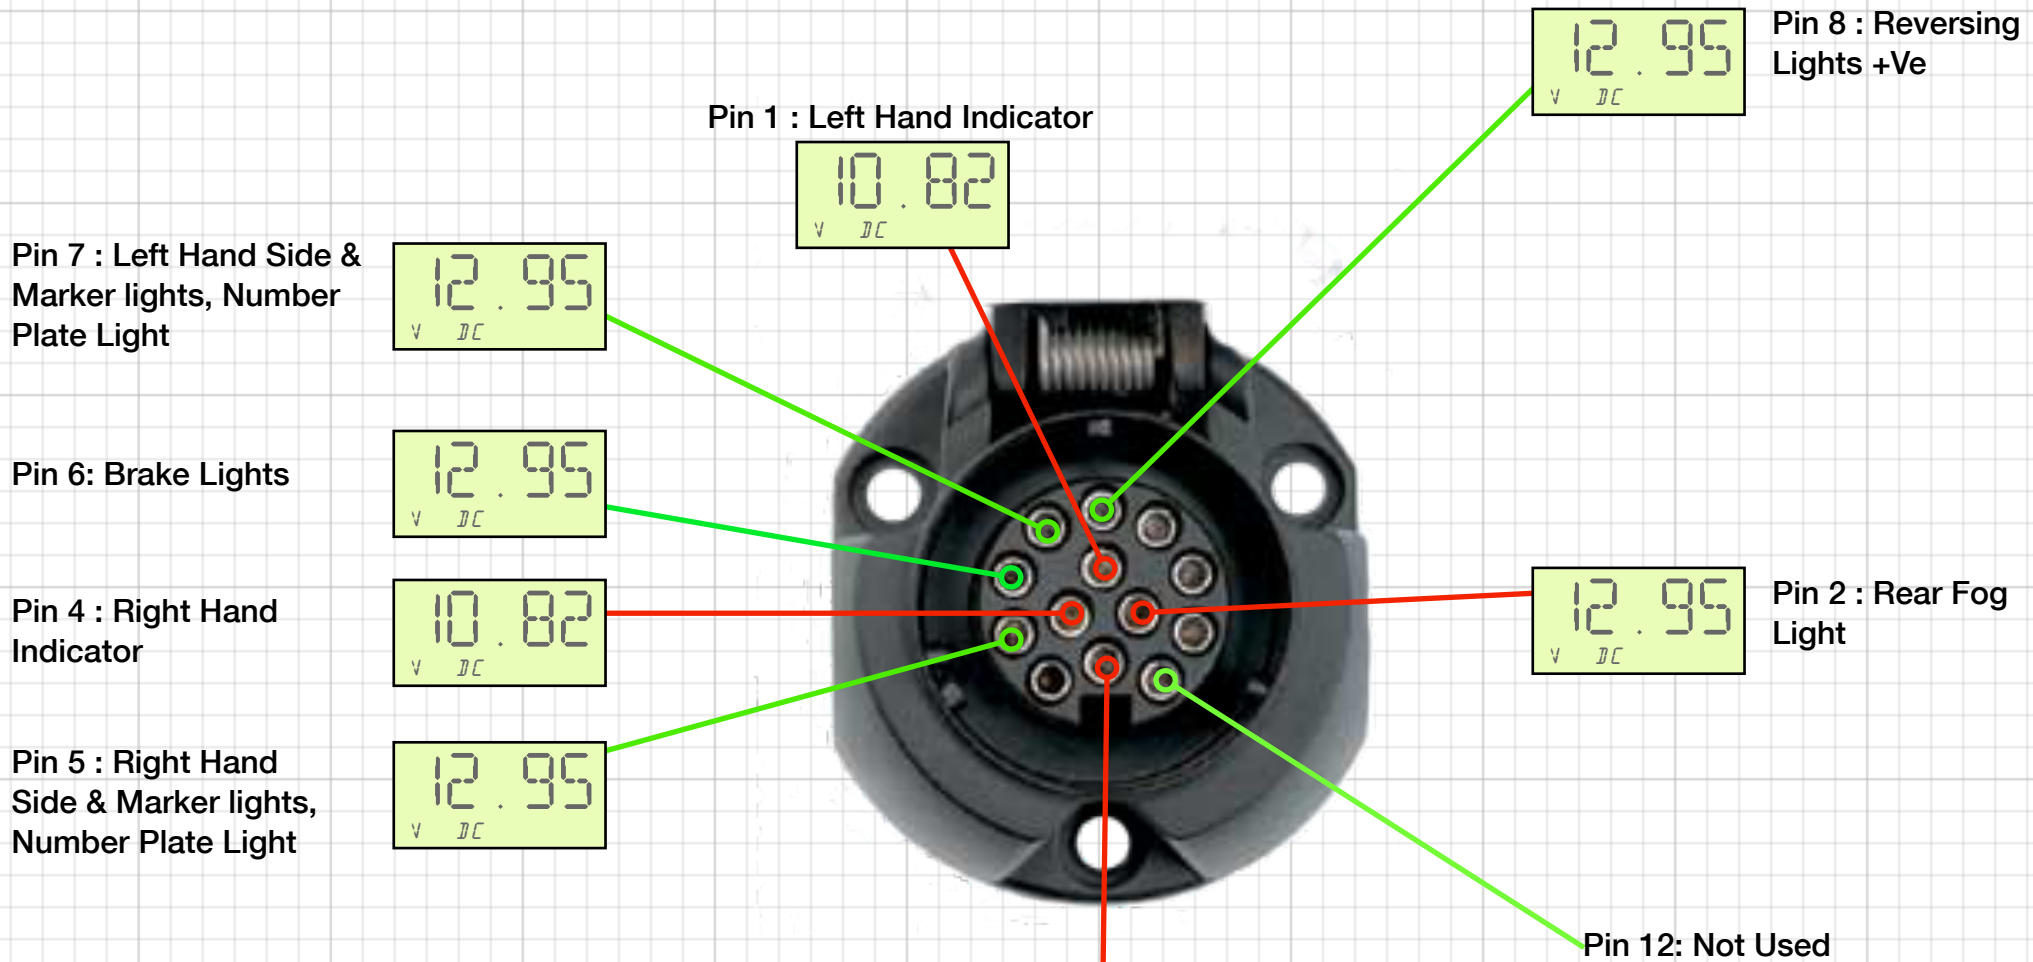

As the indicators flash, your multimeter might not read the full voltage, don't be too worried about this.

Pin 3: Earth for road lights only

