
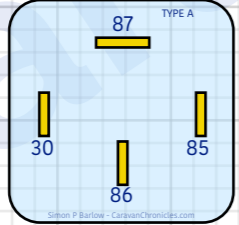
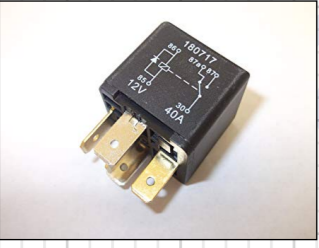


Cable should be a minimum of 2.5mm² - 4mm² would be better but can be difficult to terminate in the 13 pin socket. 3mm² is available from some on-line specialist vehicle wiring suppliers.

Both earth (-ve) cables should be run back to the battery to reduce voltage drop.

Relay is a 30 Amp single pole.

IMPORTANT:
Check that the ignition controlled source for the relay (green cable on diagram) is DEAD when engine cranking.

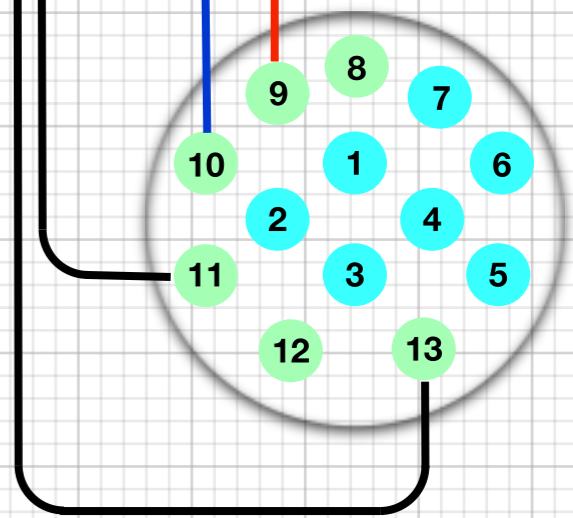

Title	Basic 13 Pin Power Loom - Drawing No 1
Drawn	Simon Barlow
Date	24/3/2019

